


LSLV-S100 REMOTE KEYPAD

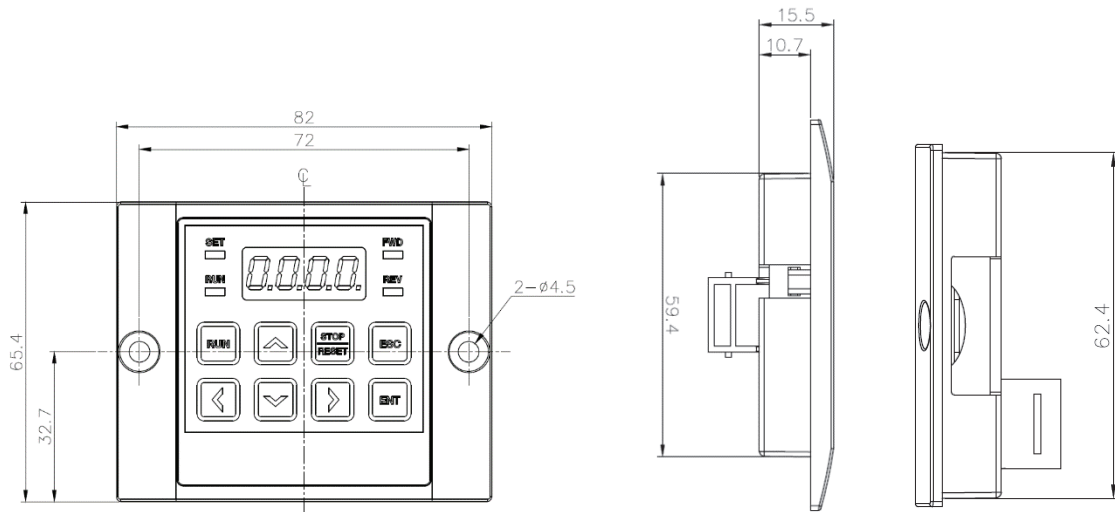

Scale : mm

Installation.

- 1 Take off the top cover of the I/O board kit and remove the hole cover to connect remote cable on the side.
- 2 Connect the other side of the remote cable to the remote keypad as shown below.

